
STAK INSTALLATION SHEET

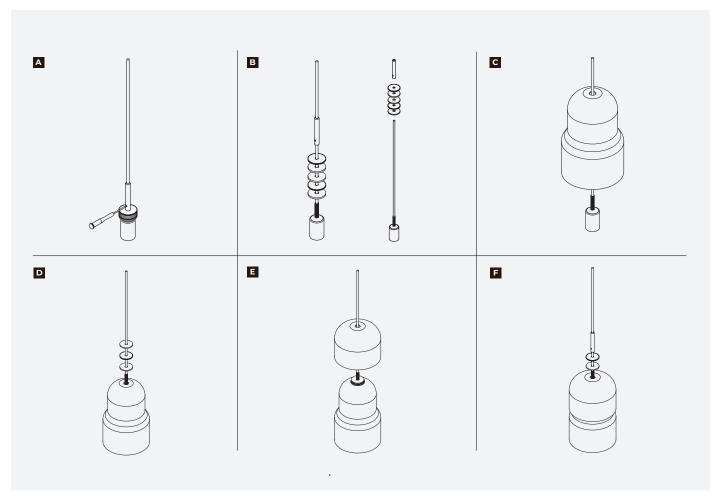


## **DESCRIPTION**

Ensure main supply is switched off and take suspension out of box.

- A. Unscrew the grub screw and the rod.
- B. Unscrew and remove rod, washers, and seals. Leave the rounded seal at the lamp holder.
- C. Place the base glass onto the suspension.
- D. Place one seal, then one metal washer, tighten. Add another seal so glass is protected.
- E. Place the top glass.
- F. Place one seal, then one metal washer, tighten. Twist the rod back on.



STAK INSTALLATION SHEET

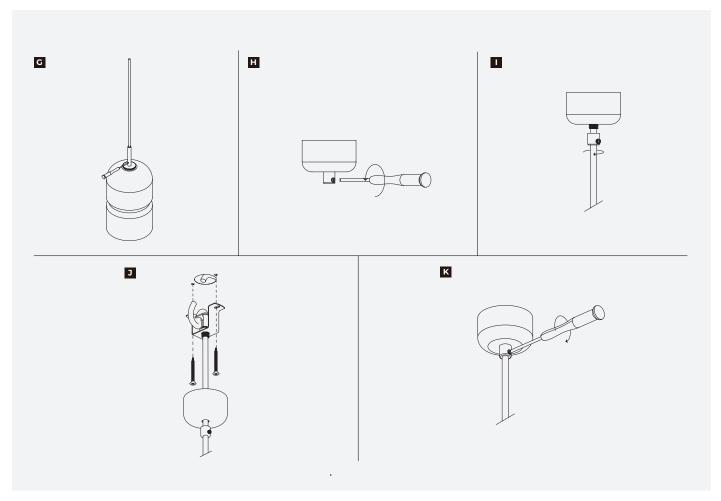

## **DESCRIPTION** (Continued)

G. Tighten cord with grub screw.

Take ceiling canopy from box. Fix ceiling bracket into place.

- H. Unscrew grub screw.
- I. Thread cord through cord grip.
- J. Ensure the cord is locked off with the figure eight. Make electrical connections, ensure all are tight.
- K. Push main body of ceiling canopy up, twist cord grip to lock off. Tighten grub screw.

